



# Mixels

41561




CARTOON NETWORK



LEGO.com

6150701

1

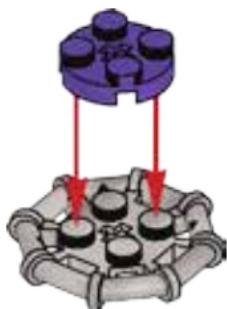

2




2


3




4

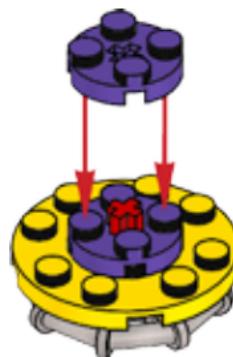


5

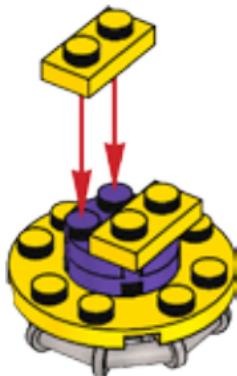

6

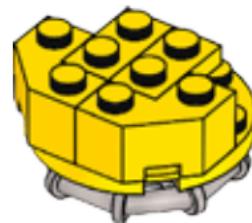

7

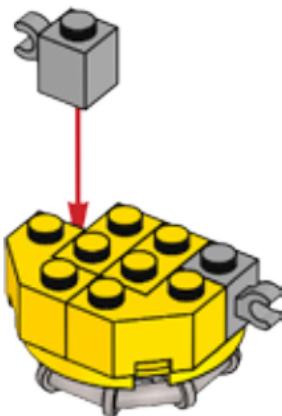


8




9




10

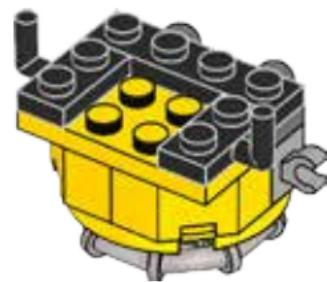


11

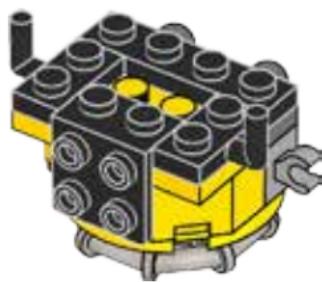

12




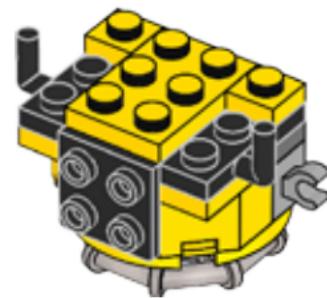


13

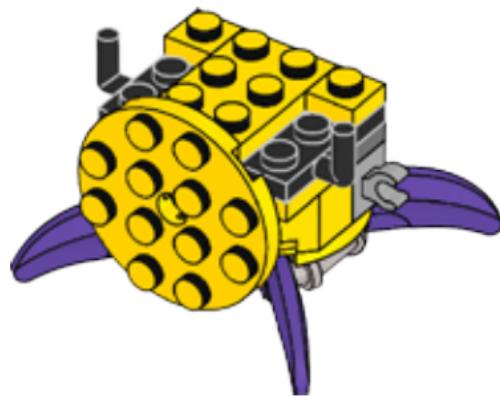


14



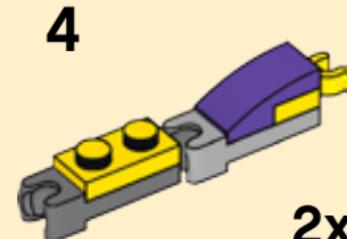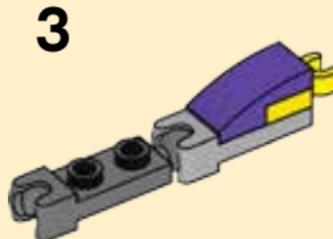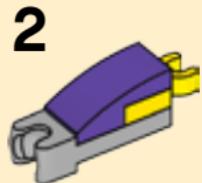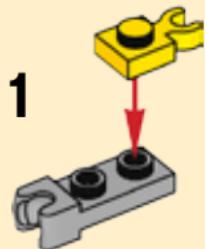


2x

15

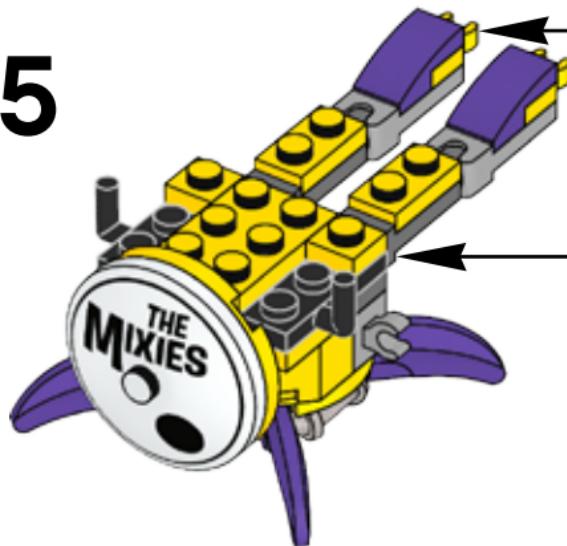

1

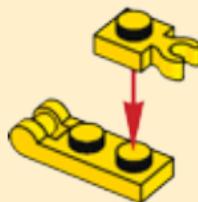


2





2x

16

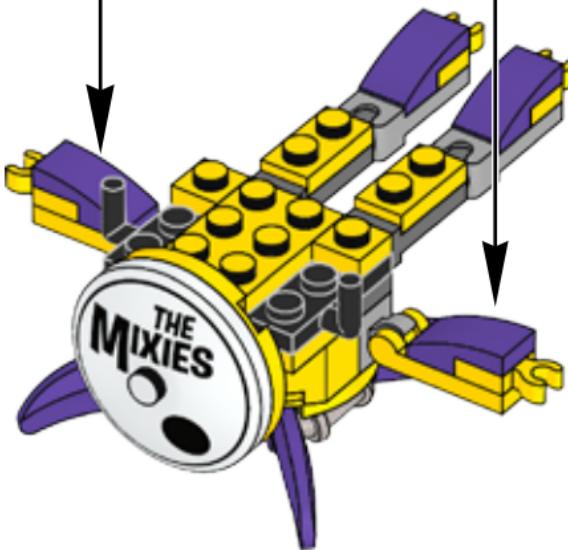


17


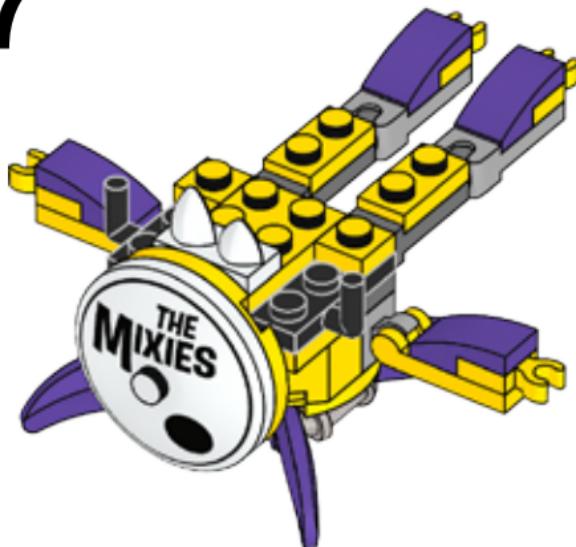


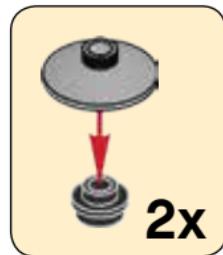


18

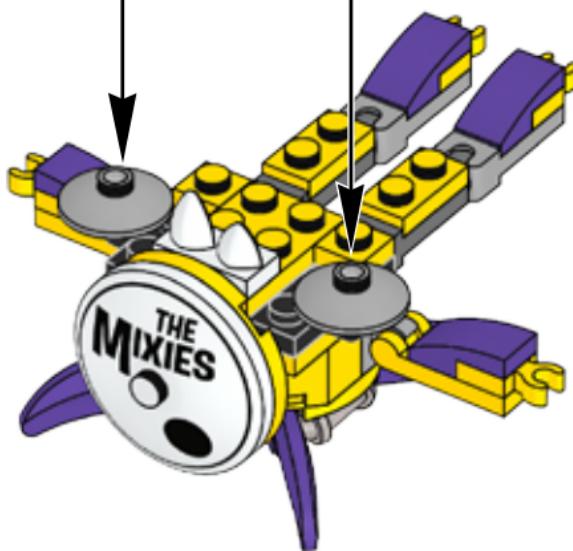

19

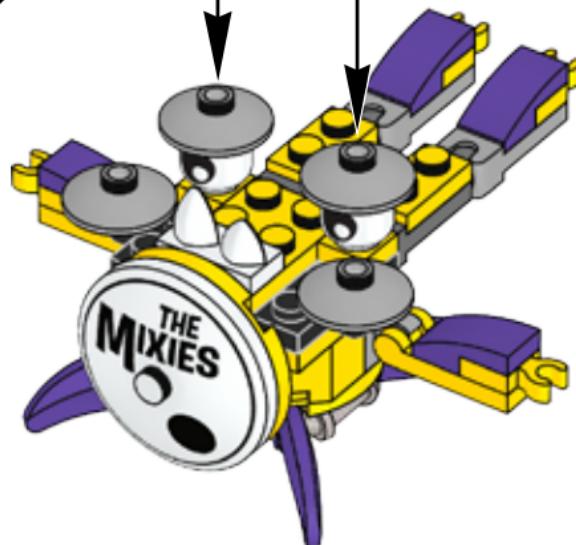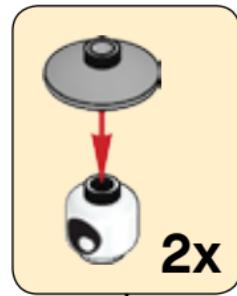

20

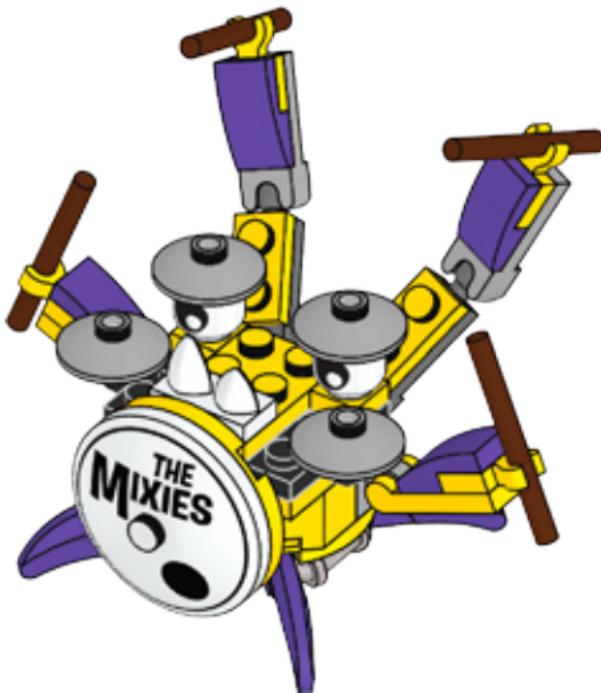



## Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

[LEGO.com/service](http://LEGO.com/service) or dial



00800 5346 5555 :

1-800-422-5346 :





JAMZY  
41560




TAPSY  
41561



TRUMPSY  
41562

**MIXIES  
MAX!**

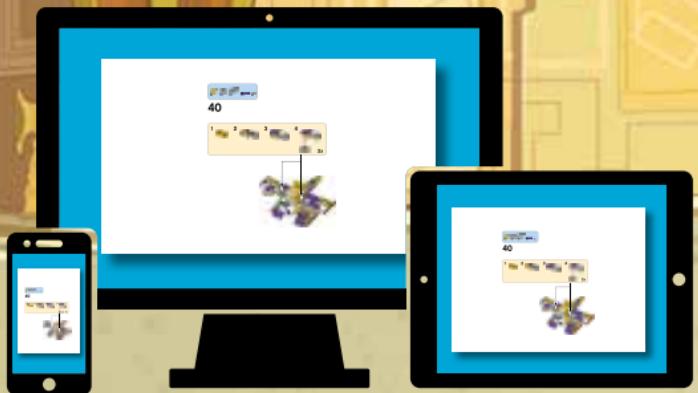

[LEGO.com/mixels](http://LEGO.com/mixels)



7

SERIES

WELCOME TO  
**MIXOPOLIS**



PALADUM  
41559



CAMILLOT  
41557



TAPSY  
41561



TRUMPSY  
41562



BUSTO  
41555



TIKETZ  
41556



KUFFS  
41554



[LEGO.com/mixels](http://LEGO.com/mixels)



MIXADEL  
41558



# Mixels

WELCOME TO  
**MIXOPOLIS**

